List of storage features

▶ 5-seat models

1 Glove box

2 Auxiliary boxes (if equipped)

3 Non smokers boxes (if equipped)

4 Door pockets

5 Cup holders

6 Console box

7 Coin holder

▶ 4-seat models

1 Glove box

2 Auxiliary boxes

3 Non smokers boxes (if equipped)

4 Door pockets

5 Cup holders

6 Console box

7 Coin holder

Glove box
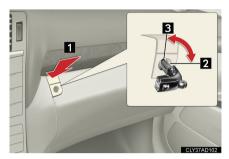
1. Open (push button)
2. Lock with the mechanical key
3. Unlock with the mechanical key

Trunk opener main switch

The trunk opener main switch is located in the glove box. (→ P. 74)

CAUTION

Caution while driving

Keep the glove box closed.
Injuries may result in the event of an accident or sudden braking.

Coin holder

Press in the button.

CAUTION

Caution while driving

Keep the coin holder closed.
Injuries may result in the event of an accident or sudden braking.

Door pockets (front)

The front door pockets can be opened and closed.

CAUTION

Caution while driving

Keep the door pockets closed.
Injuries may result in the event of an accident or sudden braking.

Cup holders

▶ Front

Press down and release the right side of the cup holder lid.

▶ Rear (5-seat models)
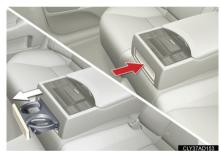
Press in and release the cup holder.

▶ Rear (4-seat models)

Press in and release the lid.

CAUTION

■ **Items unsuitable for the cup holder**

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

■ **When not in use**

Keep the cup holders closed.
Injuries may result in the event of an accident or sudden braking.

Console box

▶ Without rear console display

1. Slide the armrest while pressing the button.
2. Lift the armrest.

▶ With rear console display

1. Press the button.
2. Lift the armrest.

■ **Tray in the console box (without rear console display)**

The tray can be raised backward.

■ **Opening and closing assist function (without rear console display)**

When the console box is opened or closed partway, this function will apply force in the appropriate direction, helping open or close the console box.

■ **Caution while driving**

Keep the console box closed.
Injuries may result in the event of an accident or sudden braking.

■ **Tray**

Do not insert items exceeding the height of the tray. Doing so may prevent opening and closing of the lid.

Non smokers boxes (if equipped)

▶ Front

Press in the lid.

▶ Rear

Open the lid.

Removing the non smokers box (front)

Holding the left edge of the non smokers box, pull upward.

CAUTION

■ **Using the non smokers box**

Do not use the non smokers boxes as an ashtray.

■ **Caution while driving**

Keep the non smokers boxes closed.
Injuries may result in the event of an accident or sudden braking.

Auxiliary boxes

▶ Overhead

Press in the button.

This box is useful for temporarily storing sunglasses and similar small items.

▶ Rear console (with rear console display)

Press in the lid.

▶ Rear seat (5-seat models)

STEP 1 Pull down the armrest. (→P. 384)

STEP 2
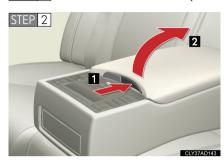
1 Press the button.

2 Lift the lid.

The lid cannot be lifted while it is slid back. (→P. 384)

▶ Rear seat (4-seat models — seatback)

Press in the lid.

This box is useful for storing DVD discs and headphones.

▶ Rear seat (4-seat models — armrest)

Pull up the lever to release the lock and lift the lid.

■ **Tray in the rear console**

The tray can be removed.

CAUTION

■ **Items that should not be left in the auxiliary box (overhead type)**

Do not leave glasses or lighters in the box.
If the interior of the vehicle becomes hot, lighters may explode and glasses may warp or crack.

■ **Caution while driving**

Do not leave the auxiliary box open while driving.
Items may fall out and cause death or serious injury in case of an accident or sudden stop.